



Install eaves higher than purlin **3.7 Cm.** In case VIVA+FOAM and use **3.5 Cm.** In case OSB+FOAM

### Preparation installation

1. In case of material using VIVA BOARD
  - 1.1 use purlin, distance **40 cm.**
  - 1.2 At every distance of **2.40** meters, double purlin to support Viva Board next sheet.
  - 1.3 Install eaves higher than purlin **12 mm.** in case use VIVA BOARD
  - 1.4 Install eaves higher than purlin **37 mm.** in case use VIVA BOARD+FOAM
2. In case of material using OSB BOARD
  - 2.1 Purlin distance **40-41 cm.**
  - 2.2 At every distance of **2.44** meters, double purlin to support OSB Board next sheet.
  - 2.3 Install eaves higher than purlin **10 mm.** in case use OSB BOARD
  - 2.4 Install eaves higher than purlin **35 mm.** in case use OSB BOARD+FOAM

### Installing shingle roof +waterproofing + insulation foam system

1. Install VIVA BOARD + XPS Insulation FOAM on the purlin
2. Install PRIMER surface
3. Install MEMBRANE SOPREMA
4. Install SHINGLE Starter
5. Install SHINGLE Roof

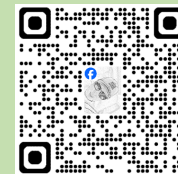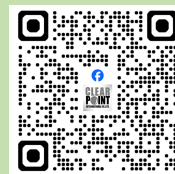

<https://www.facebook.com/clearpoints>  
[www.clear-points.com](http://www.clear-points.com)

For more information, please contact  
 Mobile 081-912-2823 Ms.Kanlaya Suwan (Dao)  
 clearpoints.kanlaya@gmail.com Line ID **0819122823**  
 Technical support Call : **081-934-4422**

